

Important information about battery icon

When the battery icons appear and stay on the display normal watch mode then it's time to replace battery. But the battery indicator can also appear for a short time when you use the vibration functions because the vibrator takes all the power. Sometimes at the same time the display can lose strength but that's perfectly normal. You don't need to replace battery.

When the battery indicator appears on the normal watch mode then it's time to change battery. See the pictures below.



You don't need to replace battery when the battery indicators appears on the referee mode



You need to replace battery when the battery indicator appears and stay on the normal watch mode

How to replace battery on SPINTSO watch



1. Start by removing the two screws at each end of the strap (use two screwdrivers)



2. Pull and press from the other side with the screwdriver




3. Remove all six screws and open the lid



4. Use a pin or small screwdriver to lift the battery cover



5. Install the batteries correctly

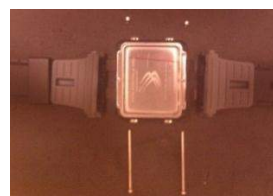

6. Mount backs the screws, the long screw can be a bit hard to press in the hole